

Instruction Manual

IMPORTANT: Read these instructions for use carefully. Familiarize yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.



MODEL: TEXAS IT003

Importer: INKO-TIME

66-433 Lubiszyn, Staw 19



DANGER



CARBON MONOXIDE HAZARD

ONLY USE IN WELL-VENTILATED AREAS.

Using this appliance in an enclosed space may cause death.

Do not use in caravans, tents, marine craft, cars, mobile homes or similar locations.

FOR YOUR SAFETY

If you smell gas:

1. Do not attempt to light appliance.
2. Extinguish any open flame
3. Disconnect from fuel supply
4. Evacuate area, call for professional help

FOR YOUR SAFETY


Do not store or use gasoline or other liquids with flammable vapours in the vicinity of this or any other appliance.

This stove is equipped for use with butane gas only. Do not attempt to operate this stove at temperatures below freezing (0 degrees C).

1. SPECIFICATION

Model number:	TEXAS IT003
Ignition type:	Piezo-electric
Dimension:	622x280x115mm
Weight:	2.66kg
Normal gas consumption:	180g/h per burner maximum
Type of gas :	Butane gas
Max pan with water:	22cm
Safety pressure:	4-6bar
Approval:	CE

2. NAME OF SPARE PARTS

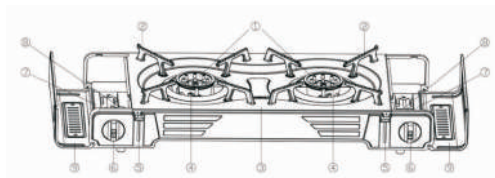

1. Burner
2. Grate
3. Body
4. Electronic ceramic needle
5. Pressure sensor-lock lever
6. Switch
7. Auto gas shut-off safety device
8. Valve
9. Cartridge cover

IMPORTANT

This appliance shall only be used with a butane gas cartridge certified to EN417 or UL147B

IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPE OF GAS CONTAINERS.

 
*REMOVE ANY TRANSIT PROTECTION MATERIAL.

3. FITTING THE GAS CARTRIDGE

1. Make sure the cartridge locking lever is in the “UNLOCK” position or the gas cartridge can not be installed.

Make sure the control knob is turned all the way clockwise to the “OFF” position. (Fig.1)

2. Open the gas cartridge cover and insert the cartridge so that the valve tab is aligned with the slot in the cartridge rim. (Fig.2)



(Fig.1)

Check that the seals between the appliance and the gas cartridge are in place and in good condition before connecting the gas cartridge.

DO NOT use this appliance if it has damaged or worn seals.

DO NOT use this appliance if it is leaking, damaged or does not operate properly.



(Fig.2)

3. Push down on the cartridge lever to the “FUEL LOCK” position. (Fig.3)

NOTE: if there is a leak from your appliance (smell of gas) and you can not stop the gas flow, remove the appliance to a well-ventilated location away from any ignition source. Check for leaks using soapy water. Do not try to detect leaks using a flame.



(Fig.3)

CAUTION: when connecting or disconnecting the gas cartridge, be sure that no external sources of ignition are present.



WARNING

THE OPENINGS AT THE BASE OF THE BURNER PROVIDE AIR FOR COMBUSTION, THEY SHOULD NEVER BE OBSTRUCTED. IF THE FLAME BECOMES SIGNIFICANTLY ORANGE CHECK THESE OPENINGS FOR A BLOCKAGE.

IF THE APPLIANCE CAN NOT BE ADJUSTED TO PERFORM CORRECTLY IT SHOULD NOT BE USED UNTIL SERVICED OR REPAIRED.

4. LIGHTING THE STOVE

NOTE: Closed the cartridge cover before lighting. Not closing the cover can cause the cartridge to overheat.

- *Turn the control knob counter clockwise until you hear a click indicating that a spark has been produced.(Fig 4)
- *If the stove dose not light, turn the control knob back to OFF positon and repeat.
- *If after three failed attempts, the stove dose not light, turn the control knob to the "OFF" positon and move the cartridge lever to the "UNLOCK" positon.
- *Open the cartridge cover and remove the cartridge, Shake the cartridge to see if it is empty. If empty, replace the cartridge and begin from Fig.1



(Fig.4)

5. TO ADJUST HEAT

Flame can be controlled by turning eh igniton knob between the "IGNITION" and "OFF" positon.

EXTINGUISHING

- 1.Turn the igniton knob to "OFF"to shut off fuel supply (Fig.5), Wait until the flame is fully extnguished before performing the next step.
- 2.Raise the cartridge lock lever to "UNLOCK" and remove the gas cartridge from the compartment.(Fig.1)



(Fig.5)

NOTE:Do not lever the gas cartridge inside the unit when not in use.

6. AFTER USE

- 1.Replace the cap on the gas cartridge afer removing it from the unit. Store upright in a cool dry place.
- 2.Make sure the burner is cool to touch before packing unit away.

7. THE AUTOMATIC SAFETY SHUT-OFF DEVICE ACTIVATION

*When sued in high temperature areas, such as the beach during summer or in a hot room, the internal pressure of the cartridge may rise to more than 500kPa(normal pressure=200-300kPa) This will activate the Automatc safety shut-off device inside the regulator.

*Remove the gas cartridge from the compartment.

If the stove had been in use and was working properly, the butane can should be cold to the touch. If it is not and feels warm, go back to the "Precautons" on the stove use section and confirm if you are using he stove correctly.

*Turn the igniton knob to "IGNITION"to release any excess gas inside the regulator.

Repeat the 3 steps for insertng the gas cartridge afer it has cooled down.

IMPORTANT WARNING: IF YOU CAN NOT FIND THE CAUSE OF THE SAFETY DEVICE ACTIVATION, DISCONINUE USE AND CONTACT US FOR CUSTOMER SERVICE.

- *Keep your stove dean using a stff brush to clean the burner head.
- *Use a sof cloth to dean greasy parts of the stove with a soap and water.
- *Keep the igniter and the burner head gap free from debris for easy lighting.
- *Clean stove frequently to avoid grease build up and as necessary.
- *Burner flame should be blue with hint if yellow tp.

8. MAINTENANCE AND CUT

- *Never leave the stove unattended when hot or when in use.
- *Do not modify this appliance
- *CAUTION: accessible parts may become very hot. Keep young children away from the appliance all times.
- *Keep the stove area clear and free of combustible materials, gasoline and other flammable vapors and liquids.
- * Do not obstruct the flow of ventilation and combustion air around the appliance.
- *It is recommended to service yearly if the injector gets blocked, it should be replaced by an authorized person.

9. CAUTIONS FOR APPLIANCE

1. This appliance is not for household use, and not for commercial use, only for outdoor use.
2. When the appliance is for indoor use, fresh air opening into the building, failure for improper ventilation may cause injury or death.
3. Never store butane near high heat, open flame, direct sunlight, or any location that can exceed 40°C (Fig.5-6)
4. Minimum clearance from combustible walls. Not for combustible table or floor surfaces. (Fig.7-8)
5. Never use this appliance under a shelf or at the location where some object may fall off abruptly.
6. Never use this appliance for drying clothes. (Fig.9)
7. Keep the appliance away from the fire and the object which are easy to catch fire. (Fig.10)
8. The pot shall not cover the cartridge cover when using the appliance. (Fig.11)
Do not use the appliance to cook food by putting a big pot between two appliances. (Fig.12)
9. Never use this appliance to catch fire
10. Never use the appliance by putting the tray made of asbestos or ceramic pot on it. (Fig.13)
11. Never heat an empty pan. (Fig.14)
12. The temperature is very high on the surface when being used. Do not touch the appliance with hands. (Fig.15)
13. Take out the gas cartridge before checking the appliance.
14. Keep the stove at least 8 feet away from walls in any direction. (Fig.16)
15. Never store cartridge in direct sunlight. (Fig.17)



Fig.6



Fig.7



Fig.8



Fig.9



Fig.10



Fig.11



Fig.12



Fig.13



Fig.14



Fig.15



Fig.16



Fig.17

10. CAUTIONS FOR USE CARTRIDGE

1. Read the caution printed on the gas cartridge before using.
2. Check the cartridge is empty before remove it.
3. Keep cartridge away from children when not use.
4. Check the burners are extinguished before disconnecting the gas container.
5. Never re-fill the gas cartridge.
6. Gas cartridge shall be changed in a well-ventilated location,
Preferably outside away from people and any sources of ignition,
Such as naked flame, pilot flames, electric heaters or other equipment.
7. Gas cartridge can be purchased at most sporting goods and camping stores. Cartridges must be butane gas.
8. Never store butane gas cartridge near a heat source, open flame or any source of ignition.

11. CLEANING

- * Take out the cartridge before cleaning the appliance
- * Use damp dishcloth with a cleanser to clean the appliance, then wipe the appliance with a dry dishcloth
- * If the holes around the burner are blocked, use a toothpick to wipe off the dirtiness.
- * Clean the gas container inside with the brush.

12.HOW TO DEAL WITH PROBLEMS

CAUSE:

1. The switch is not on the "OFF" position.
2. The pressure sensor-lock lever is not the "RELEASE" position.
3. The holes around the burner are blocked.
4. The electronic ceramic needle is dirty.
5. Auto gas shut-off safety device takes effect
6. Gas leakage happens in the valve.
7. The gas cartridge is connected with the valve entrance incorrectly
8. The gas cartridge stem doesn't aim at the valve hole in proper alignment.
9. Without gas

SOLUTION

- A. Turn the switch to the "OFF" position
- B. Drawing the pressure sensor-lock lever to the "RELEASED" position
- C. Clean the burner and wipe off the dirtiness
- D. Clean out the dirtiness on the electronic ceramic needle
- E. Take out the gas cartridge, cool it, then use it again.
- F. Contact with the seller or professional repair department.
- G. Connect the gas cartridge with the valve entrance again.
- H. The gas cartridge stem shall aim at the valve hole, then draw the pressure sensor-lock lever to the "LOCK" position.
- I. Change the gas cartridge

CASE	CAUSE.....SOLUTION
Can't put on the gas cartridge	1.....A
	2.....B
	3.....C
Can't catch the fire	2.....B
	3.....C
	4.....D
	5.....E
	8.....H
Weak fire	9.....I
	3.....C
Flame out happens when using	5.....E
	9.....I
Peculiar smell	6.....F
	7.....G
Can't draw the pressure sensor-lock lever to LOCK position	1.....B
	5.....E
	8.....H